




INSTALLATION MANUAL

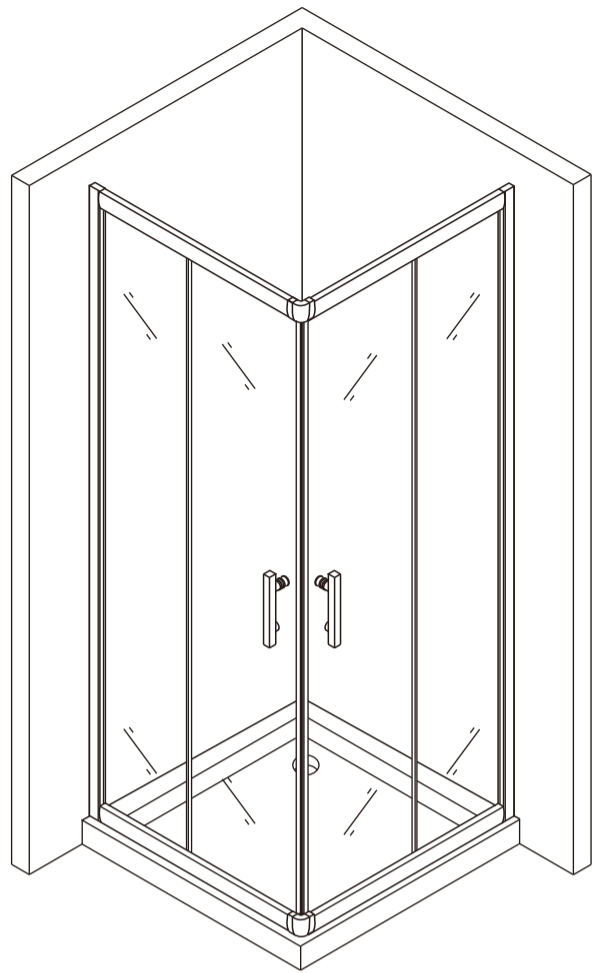


ATL-506

1


TOOL PICTURE

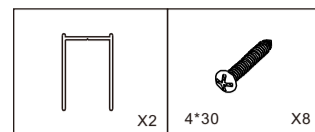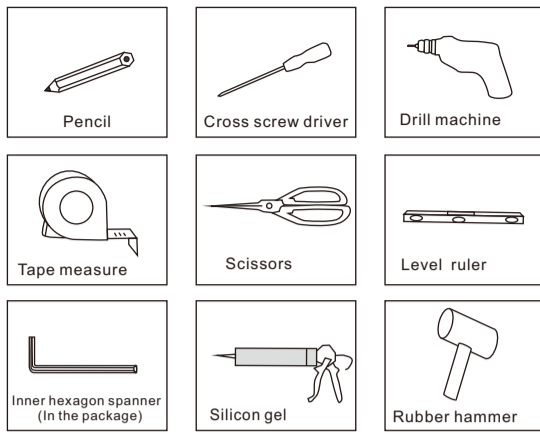




Accessory list

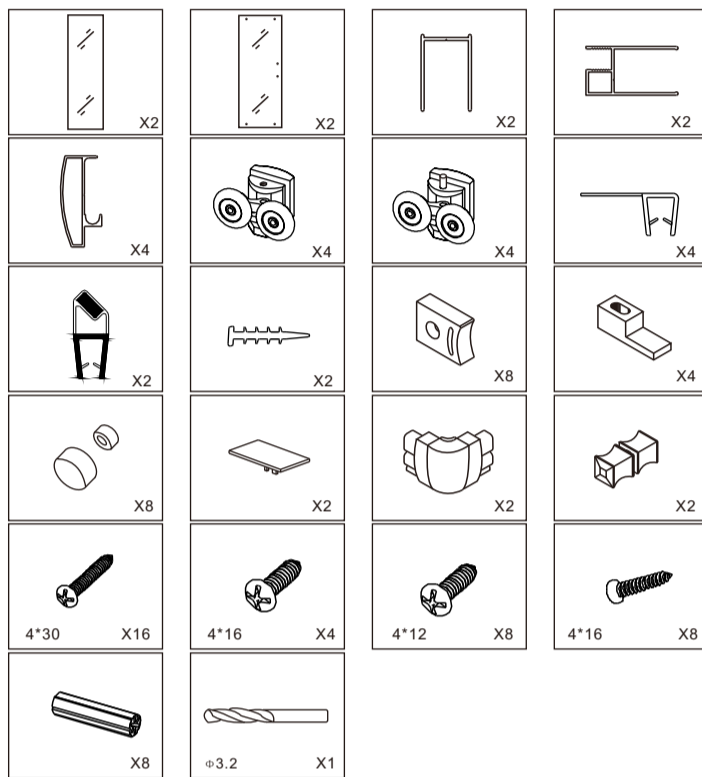


2

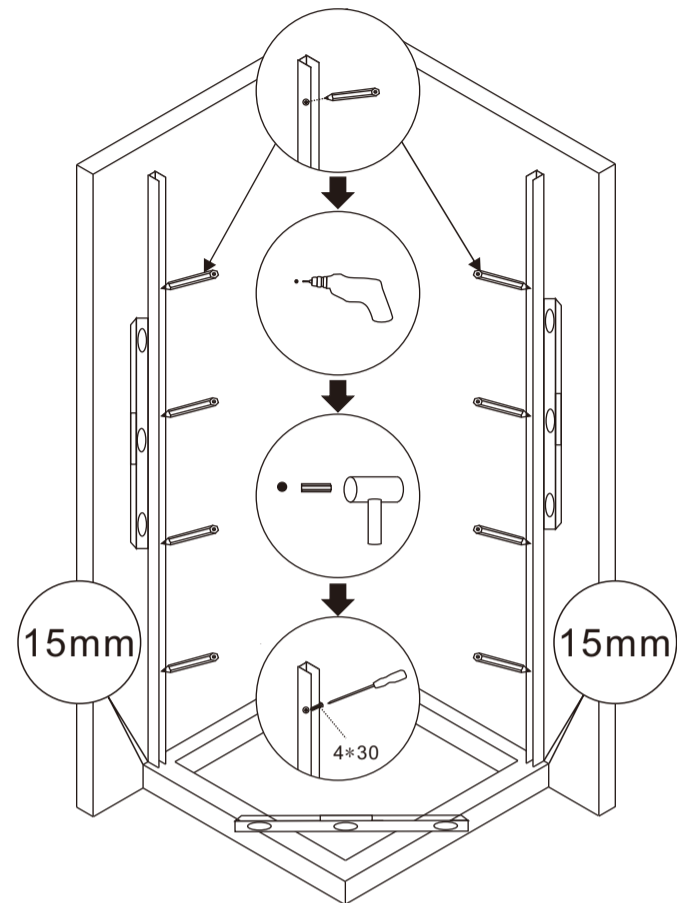


3

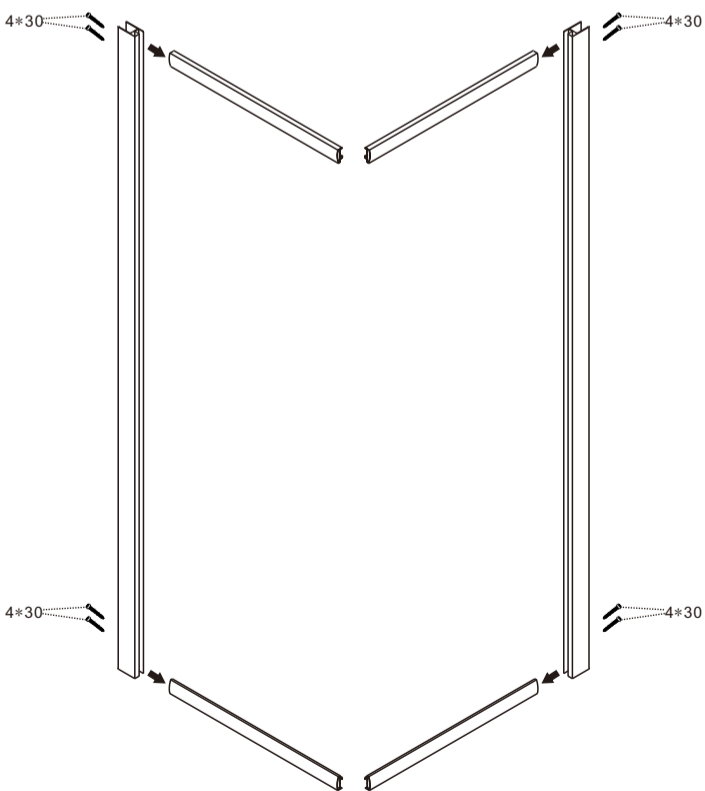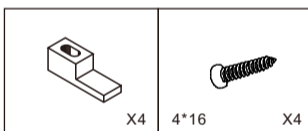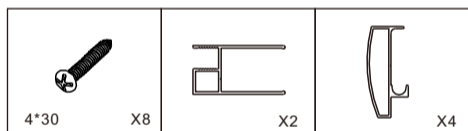




4

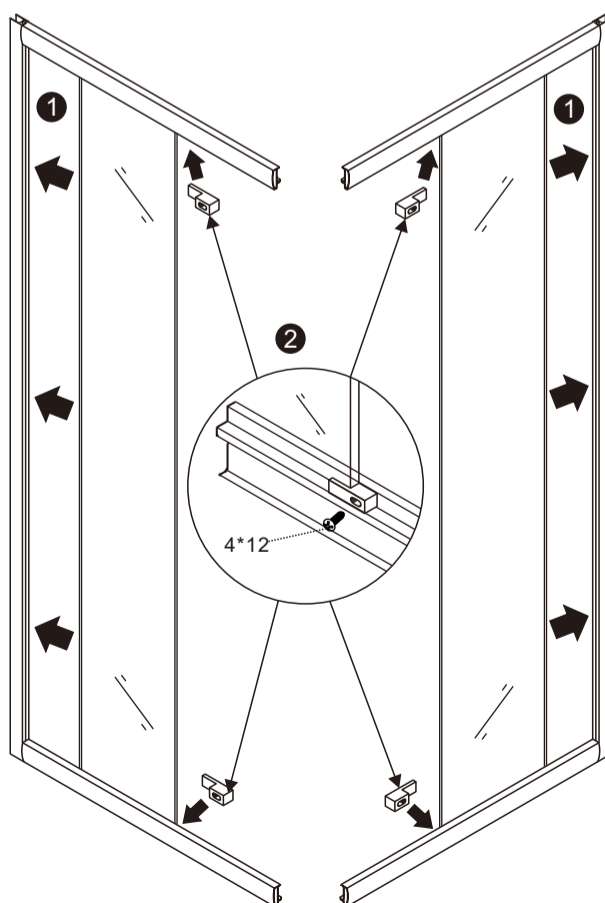


5

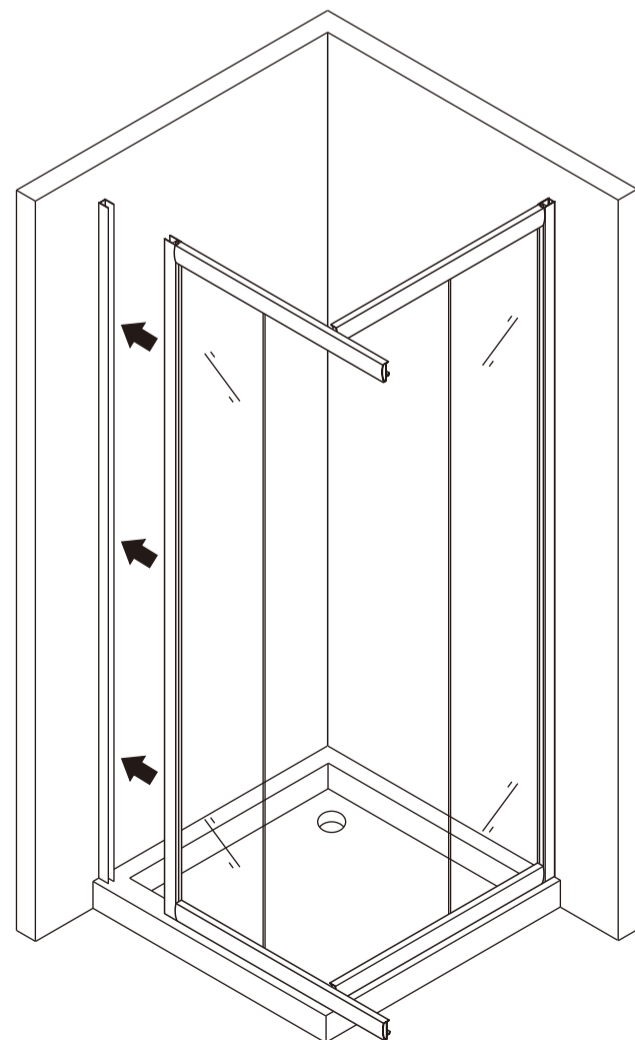


6

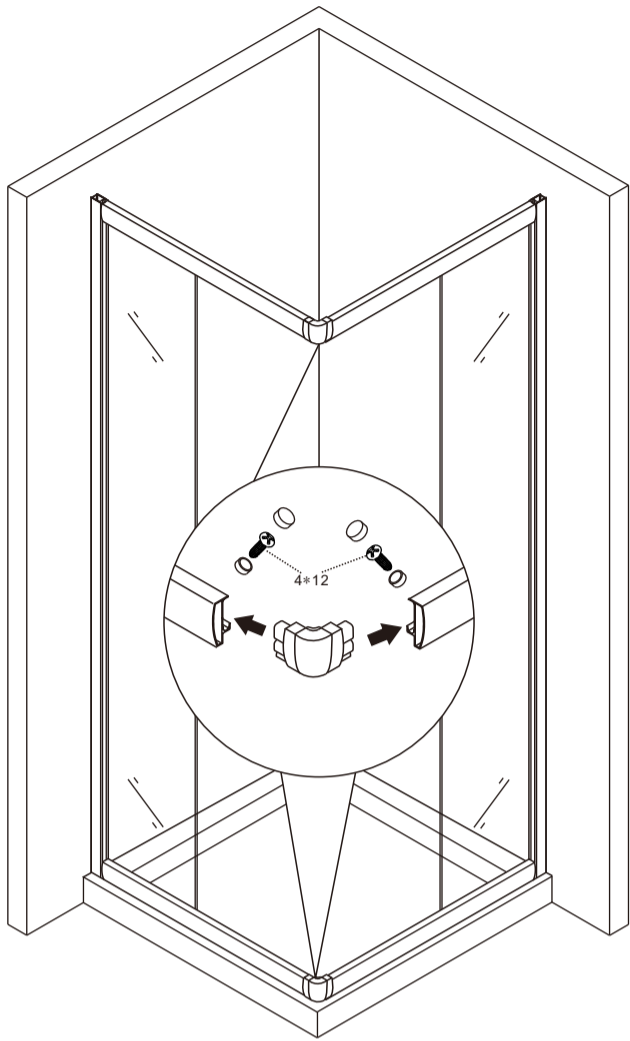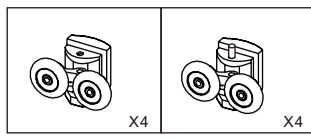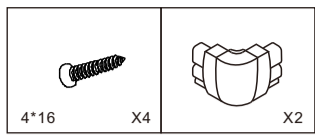



7

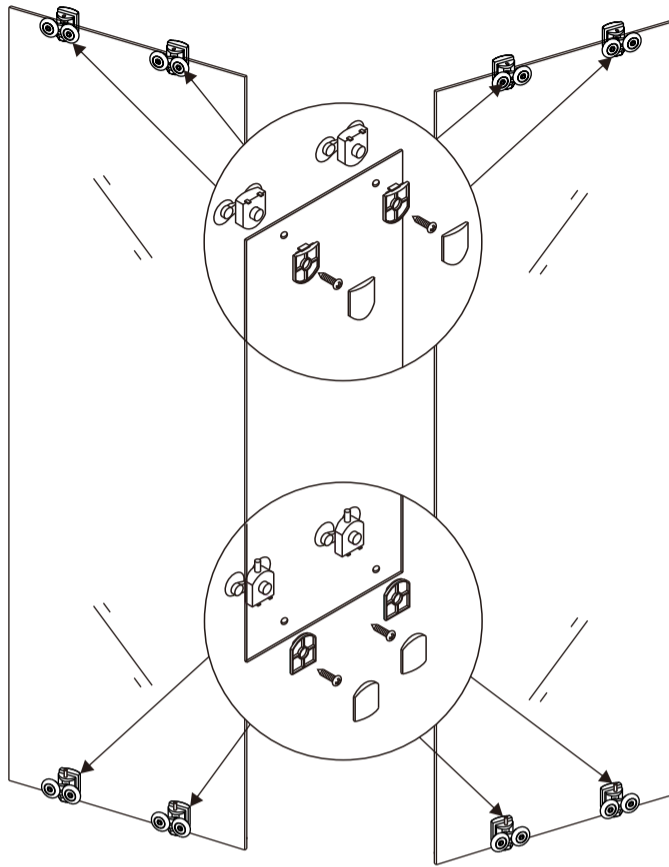


8

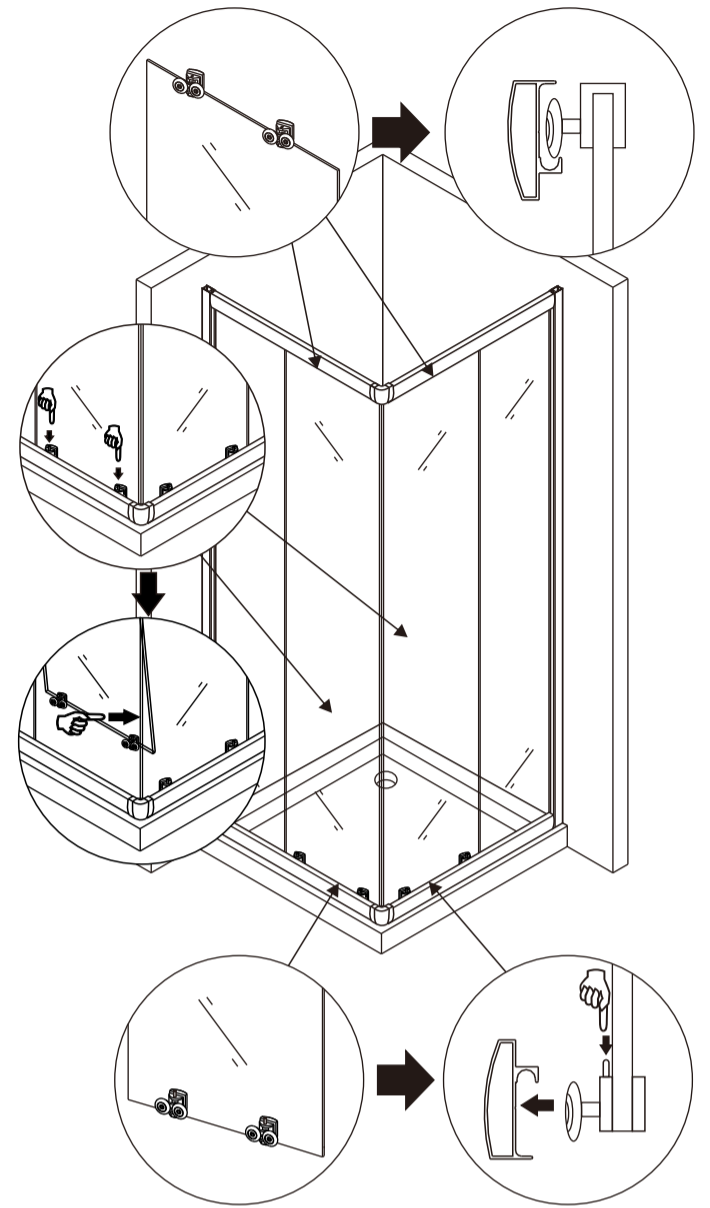

9

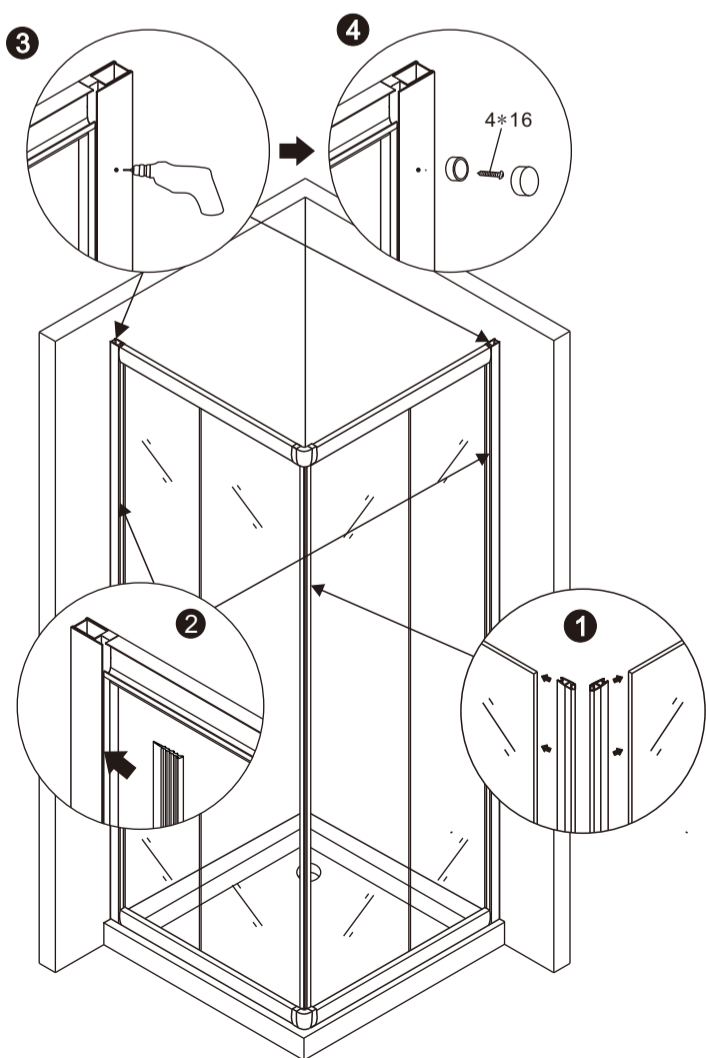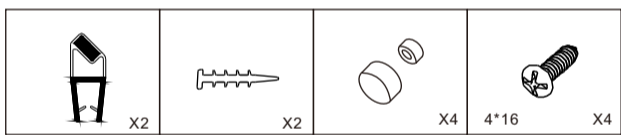

10

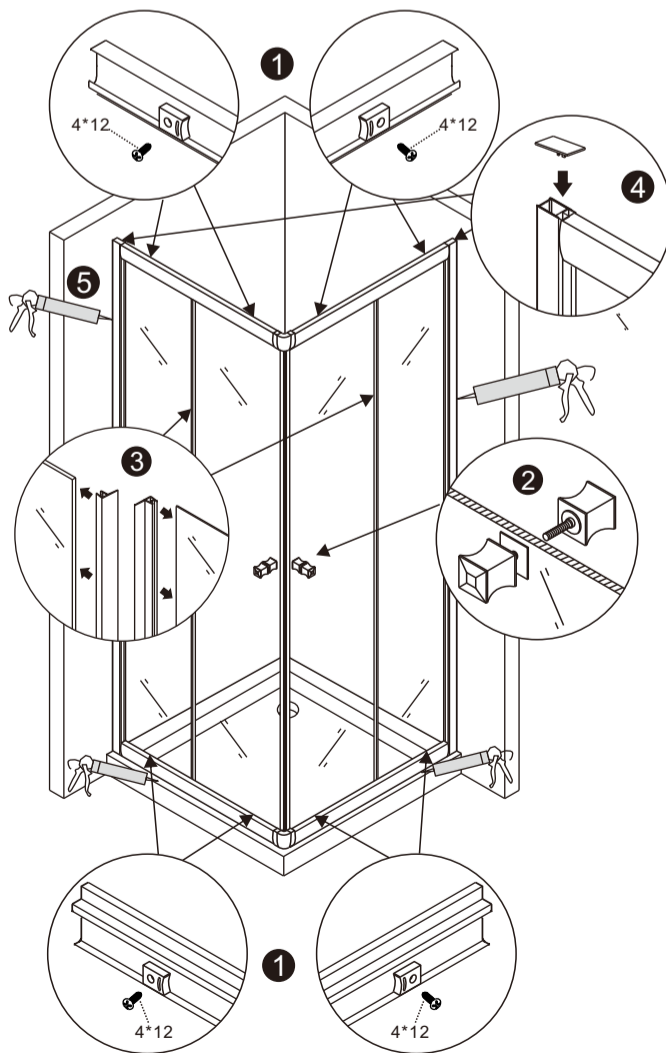

11

12