 
 
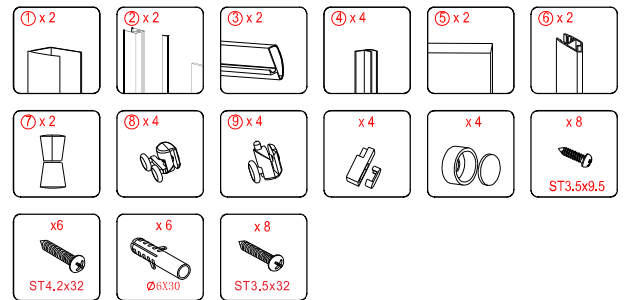 
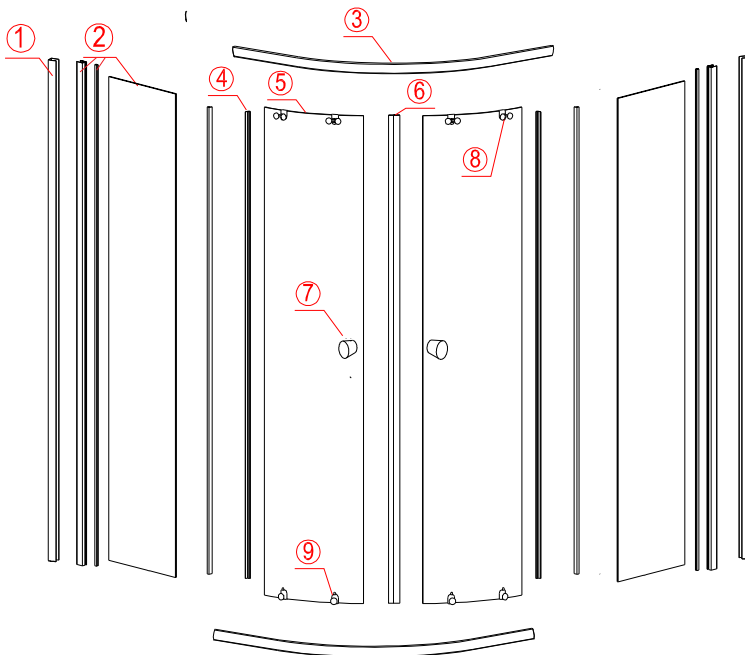 
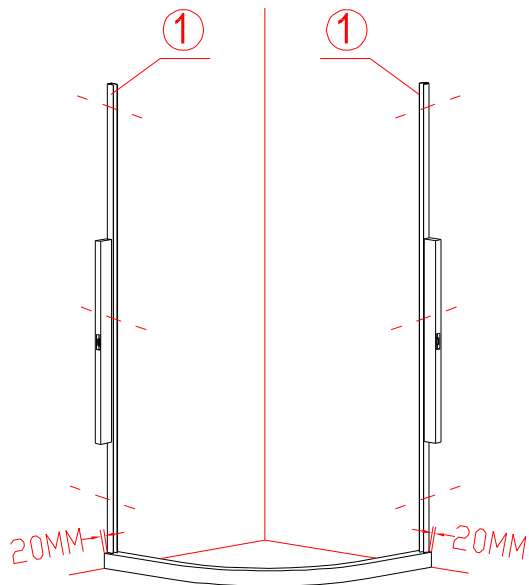 
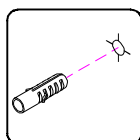 
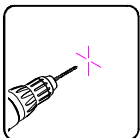 


# HLS800/900

 
 
 
 
 
## INSTALAČNÍ NÁVOD / INSTALLATION INSTRUCTION





1






2

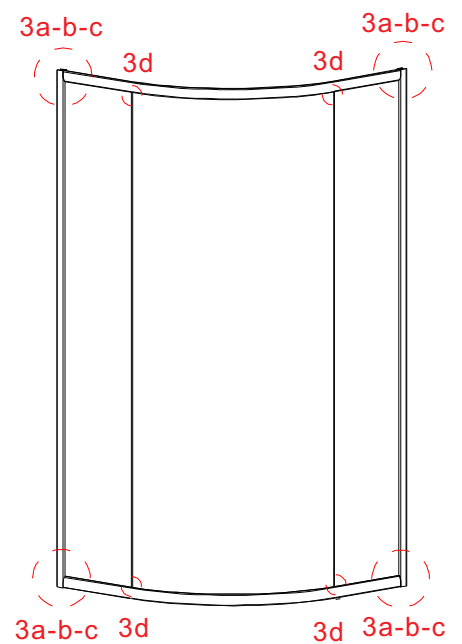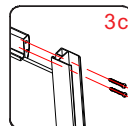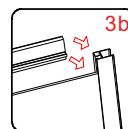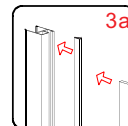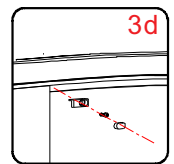




3

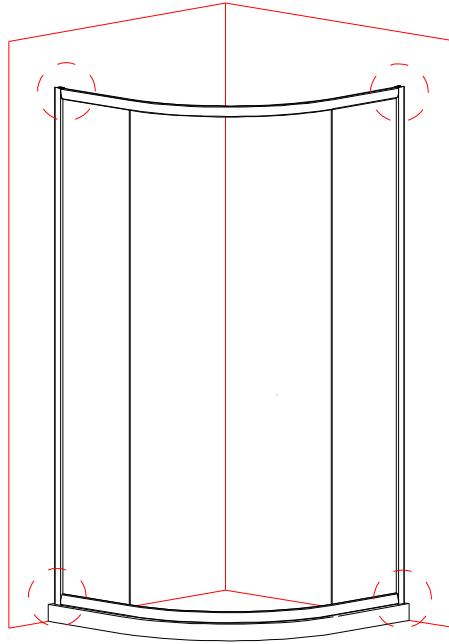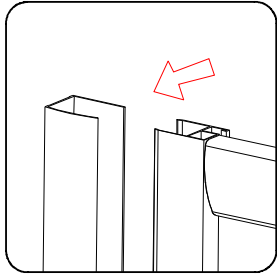  







4

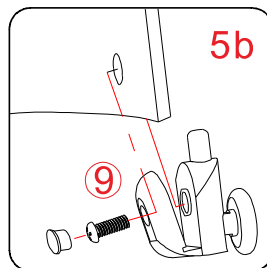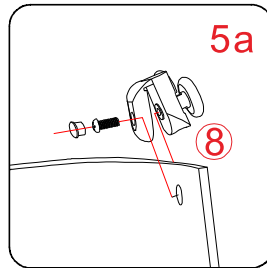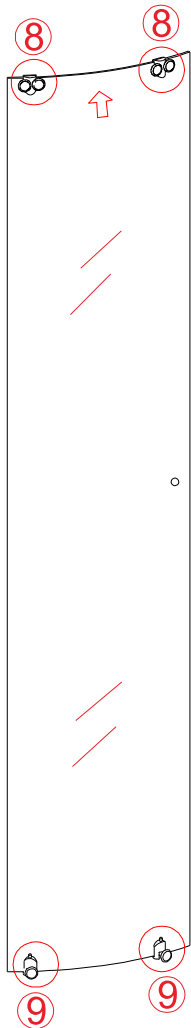   





5

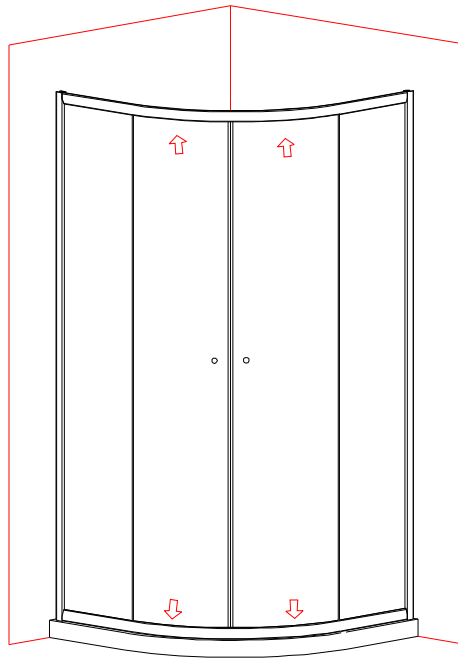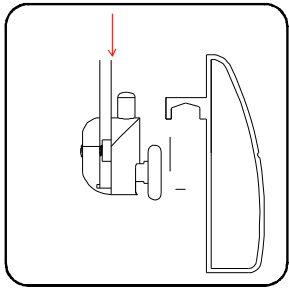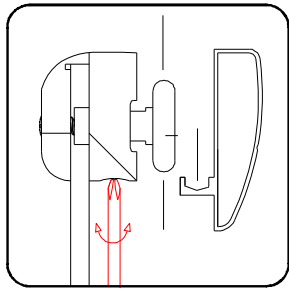   

6

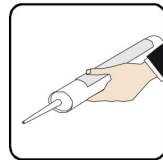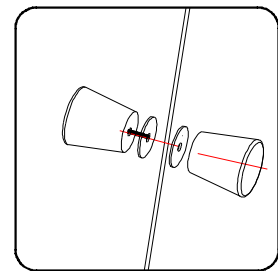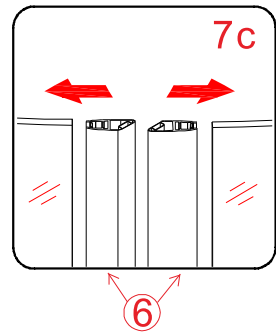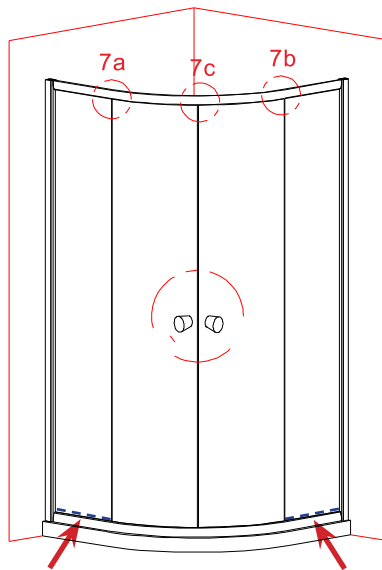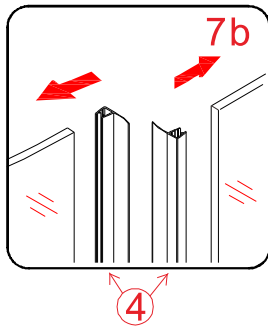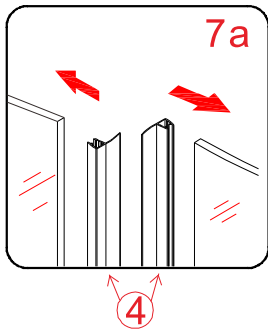      

7

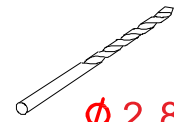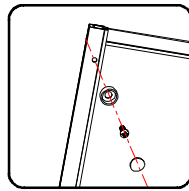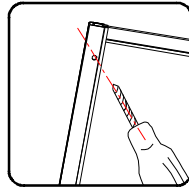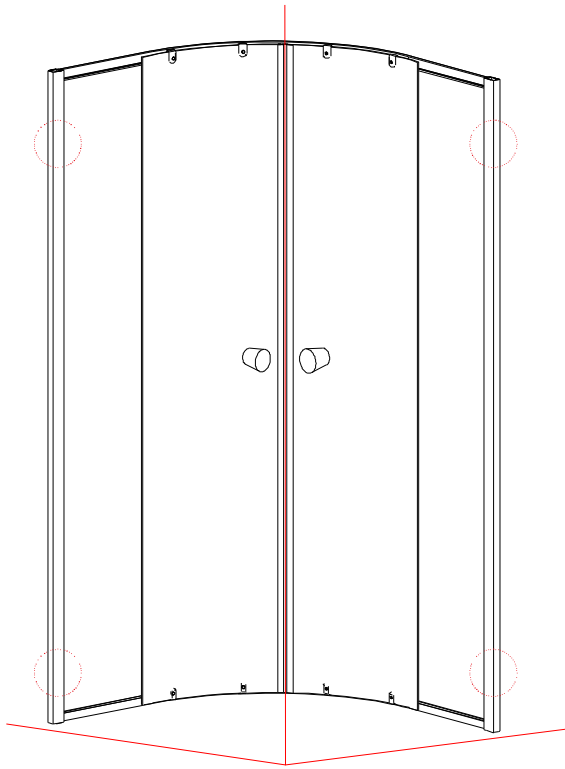    


Ø 2.8mm

x 4









ST3.5x9.5

 
x 4



8

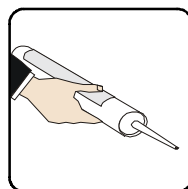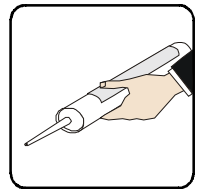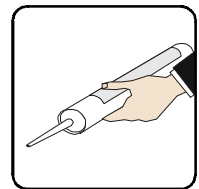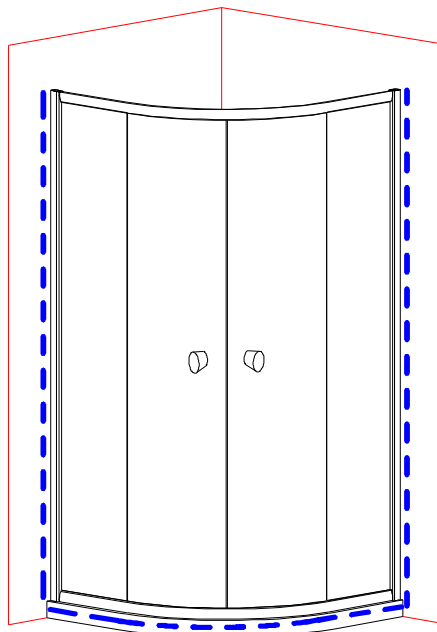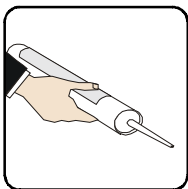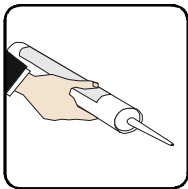      

24 hodin

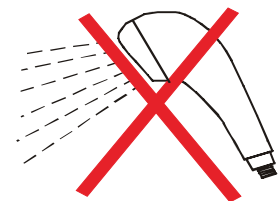 

9