



Installation Procedure SL280

GB

I. Accessories List

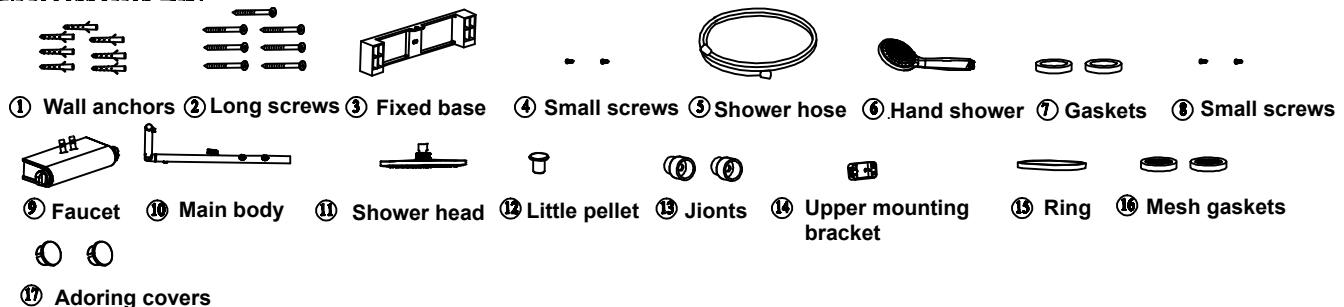

II. Procedure

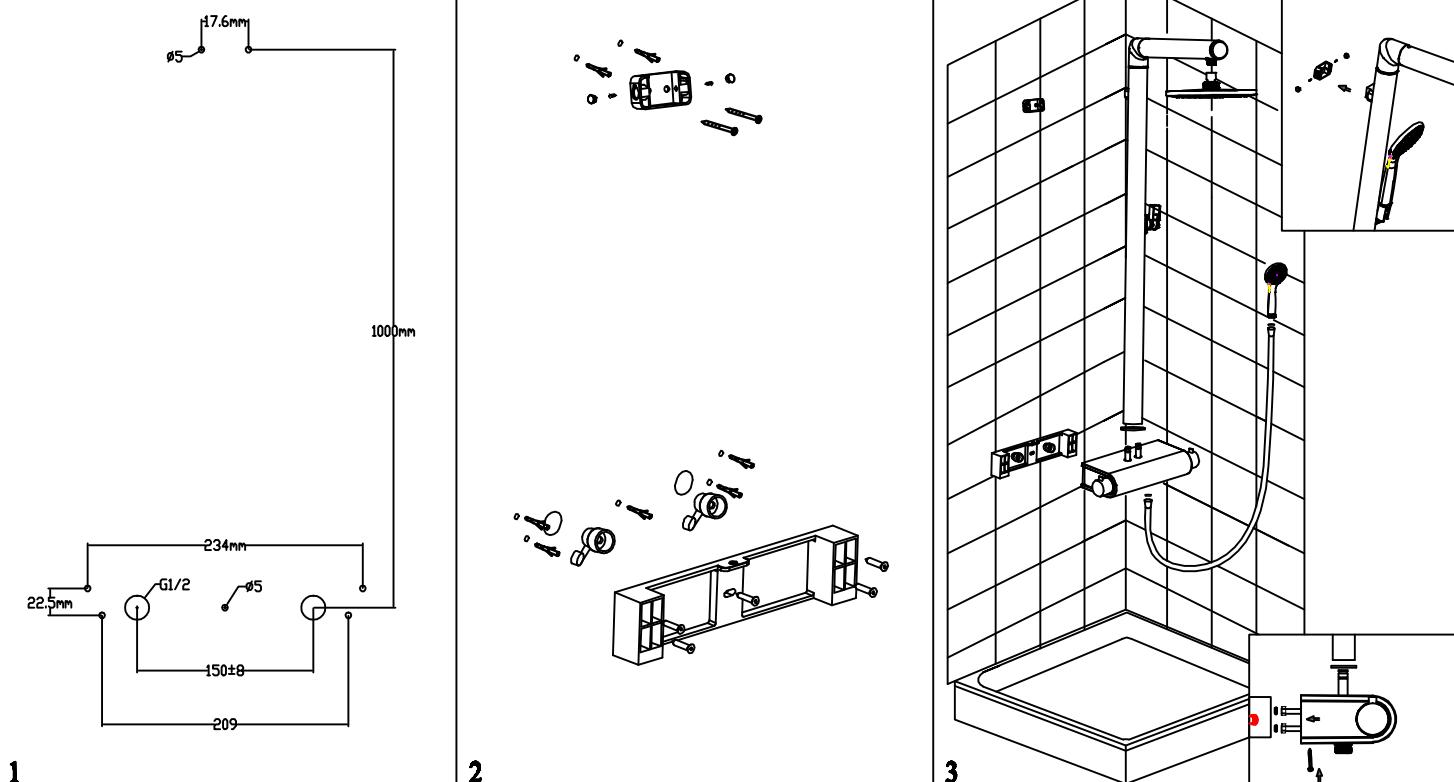

Flat Wall Installation:

1. Drill 7 holes
2. A. Insert wall anchors ① inside the holes.
 - B. Tie the PTFE tape up the joints ⑬ ,and screw the joints ⑬ to the water inlet.
 - C. Fix the fixed base ③ with the long screw ② onto the wall.
 - D. Fix the upper mounting bracket ⑭ with the long screw ② onto the wall.
3. A. Screw the faucet ⑨ to the joints ⑬ placing the mesh gaskets ⑯ in the water inlet.
 - B. Insert the faucet ⑨ to the fixed base ③, and fix them with small screws ④.
 - C. Insert the little pellet ⑫ to the faucet ⑨ for fixing.
 - D. Insert the main body ⑩ to the faucet ⑨ through the ring ⑮
 - E. Fix the main body ⑩ into the upper mounting bracket ⑭ , fixed it by small screw ④ ,Push the adoring covers ⑰ onto the upper mounting bracket ⑭ .
 - F. Connect the shower head ⑪ to the main body ⑩ .
 - G. Connect the hand shower ⑥ and faucet ⑨ to the shower hose ⑤ placing the gaskets ⑦ in the fastening nuts

Note:

1. Do not forget to use the mesh gasket ⑯ to prevent leakage on the connection.
2. If find that water pressure or water volume is unusual,please clean the mesh gasket ⑯ regular


Návod na instalaci sprchového sloupu SL280

CZ

Přehled příslušenství



Návod

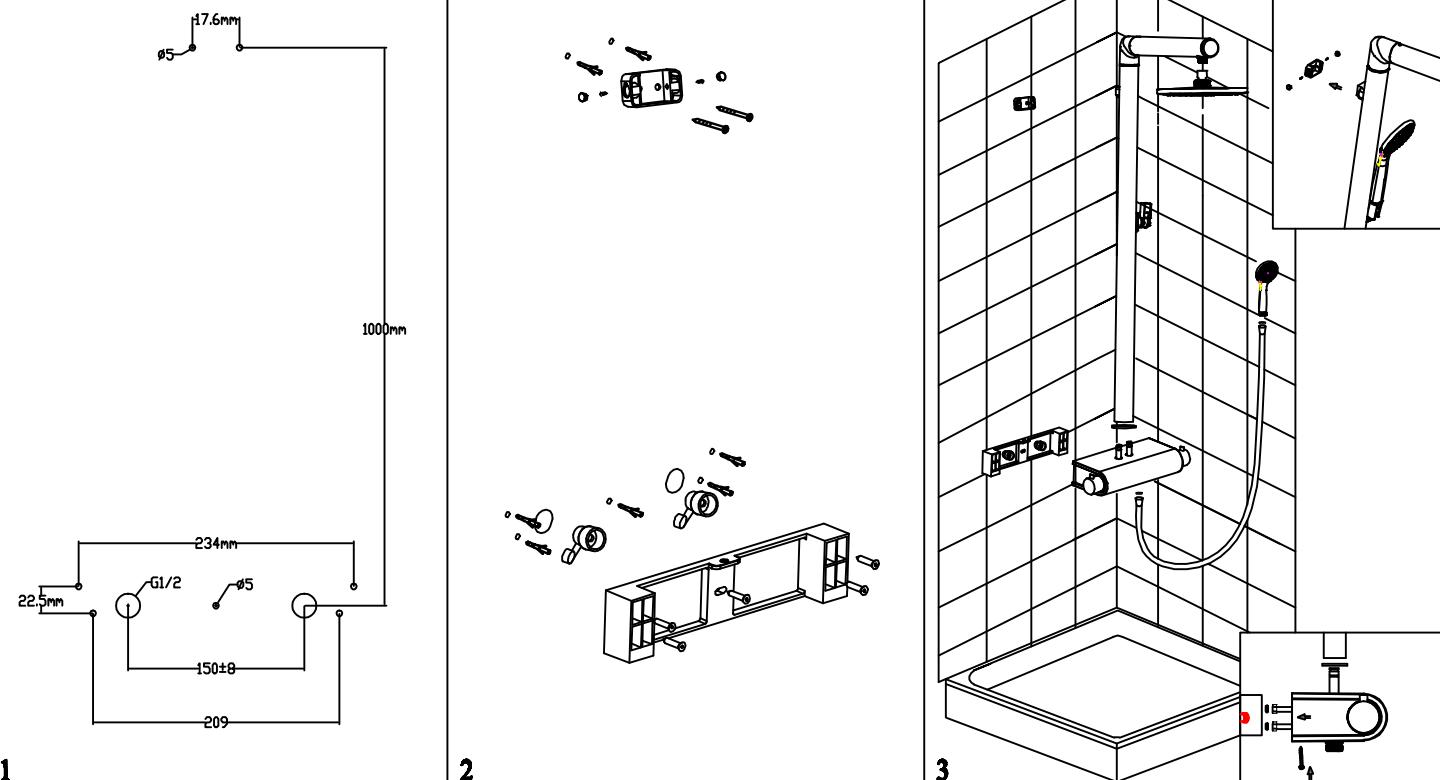

Postup

1. Vyrtejte 7 děr
2. A. do vyvrťaných děr vložte hmoždinky (1)
B. omotejte spojky (13) páskou PTFE a zašroubujte spojky (13) do vodovodního připojení
C. připevněte do zdi upevňovací základnu (3) pomocí dlouhých vrutů (2)
D. připevněte do zdi horní upevňovací držáky (14) pomocí dlouhých vrutů (2)
3. A. připravte baterii (9) do spojek (13), umístěte filtr nečistot (16) mezi baterii a vodovodní připojení
B. vložte baterii (9) do upevňovací základny (3) a přišroubujte malými vruty (4)
C. vložte malé nýtky (12) do baterie (9) pro připevnění
D. vložte tělo sprchového sloupu (10) do baterie (9) přes kroužek (15)
E. připevněte tělo sloupu (10) do horních upevňovacích držáků (14) pomocí malých vrutů (8)
Kryty (17) použijte na zakrytí horního upevňovacího držáku (14)
F. napojte hlavovou sprchu (11) k tělu sloupu (10)
G. Napojte ruční sprchu (6) na baterii (9) pomocí sprchové hadice (5) použijte těsnění (7) pod matku

Poznámka:

Nezapomeňte použít gumové těsnění, aby spoj neprosakoval.

Pokud zaznamenáte kolísání tlaku vody, vyčistěte filtr nečistot (16).

Ujistěte se, že žádná z hadic není po instalaci překroucena a že všechny spoje těsní a neprosakují.